

## Stratix EliteLoader アップ/ダウンロード手順

1. Setup.exe をクリックする。

InstallShield Wizard (Figures 1a-b). が立ち上がる。次にNextをクリックする。

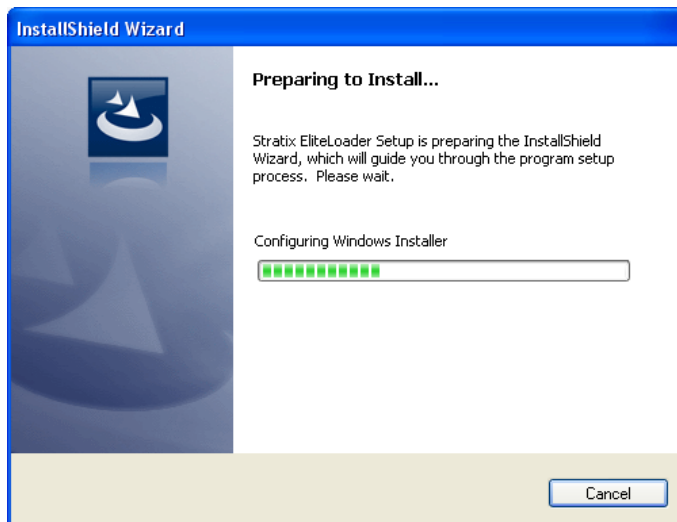


Figure 1a

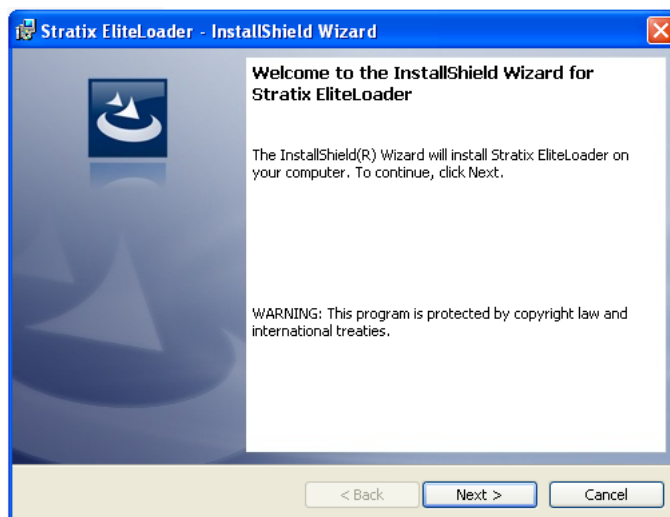


Figure 1b

2. Click Next to Figure 1c.

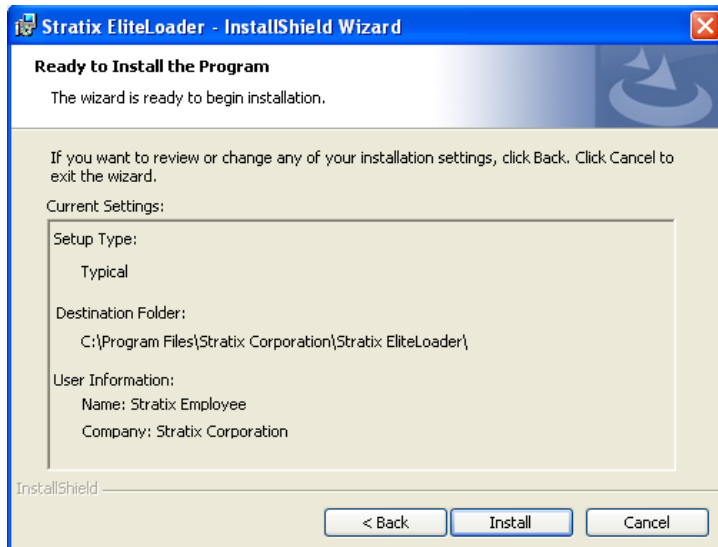


Figure 1c

3. Click Install and the InstallShield wizard will install the program (Figures 1d–e)

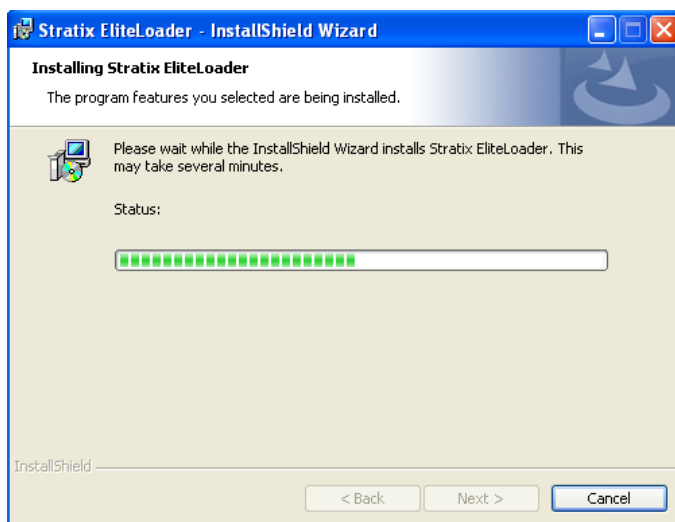


Figure 1d

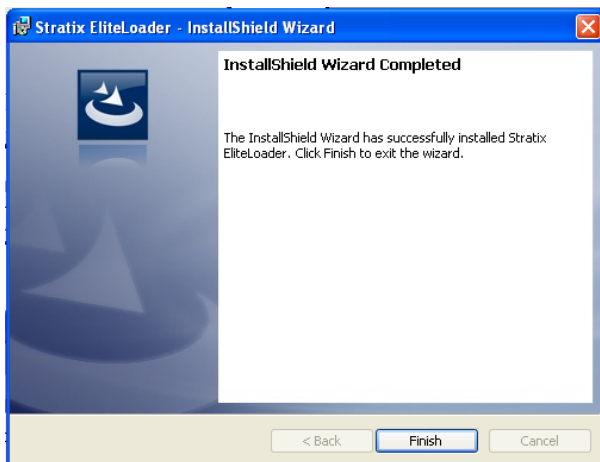


Figure 1e

4. これで PC (cドライブ ->Program Files(X86)->Stratix Corporation->Stratix EliteLoader)へのアップロード完了。

ダウンロード開始:

①エグザマイナー本体タイマーを OFF にする。

手順:

電源立ち上げ後、F+0 でメニュー画面→3→2→F+1を押し、ENTER を2回押してスタート画面に戻る。

②ダウンロード待ち受けにする。


手順:

F+0 でメニュー画面→6を押し、SVS/Loader 画面で待ち受ける。

③通信ポートの設定

手順:

COM1 9600BPS NONE パリティ 1ストップビット NONE フロー制御

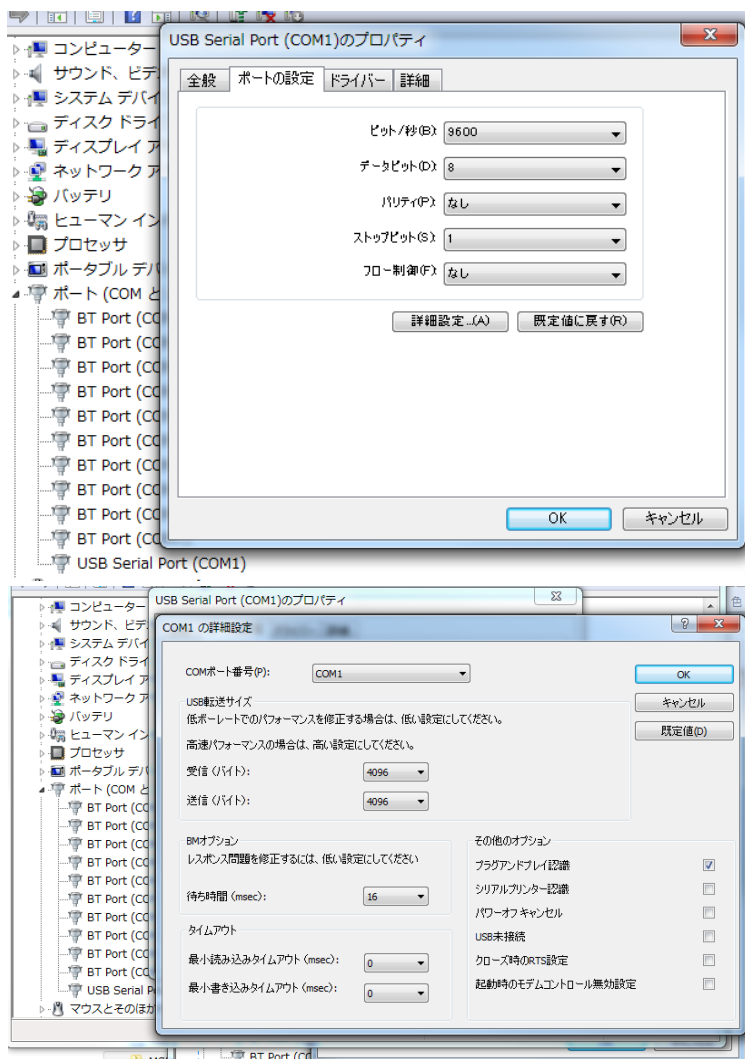

#### ④ダウンロード開始

手順:

スタート->すべてのプログラム->Stratix Corporation->Stratix EliteLoader をクリックする。

# STRATIX®

Bar Code Systems. Solutions. Service.

Stratix EliteLoader Instructions

Welcome to the Stratix EliteLoader program. This program will upgrade your Xaminer Elite Verifier. It is REQUIRED that you exit all windows programs before running this program. Please follow the instructions below:

1. Plug the communication cable RJ-41 modular connector into the Xaminer Elite.
2. Connect the communication cable to PC communication Port 1.
3. Connect the communication cable to the Xaminer Elite power supply.
4. Power on Xaminer Elite Verifier.
5. Press FUNC and 0 to go to the Main Menu.
6. Press 6 to go to the SVS/Loader screen.
7. Click Test button below, if message shows Test completed Successfully, then click Next button, otherwise try again.

Note: Download will take about 3-4 minutes.

Test Next



STRATIX®

Bar Code Systems. Solutions. Service.

Stratix EliteLoader Instructions

Welcome to the Stratix EliteLoader program. This program will upgrade your Xaminer Elite Verifier. It is REQUIRED that you exit all windows programs before running this program. Please follow the instructions below:

1. Plug the communication cable RJ-41 modular connector into the Xaminer Elite.
2. Connect the communication cable to PC communication Port 1.
3. Connect the communication cable to the Xaminer Elite power supply.
4. Power on Xaminer Elite Verifier.
5. Press FUNC and 0 to go to the Main Menu.
6. Press 6 to go to the SVS/Loader screen.
7. Click Test button below, if message shows Test completed Successfully, then click Next button, otherwise try again.

Note: Download will take about 3-4 minutes.



Test Next

EliteLoader

Test Completed Successfully

OK



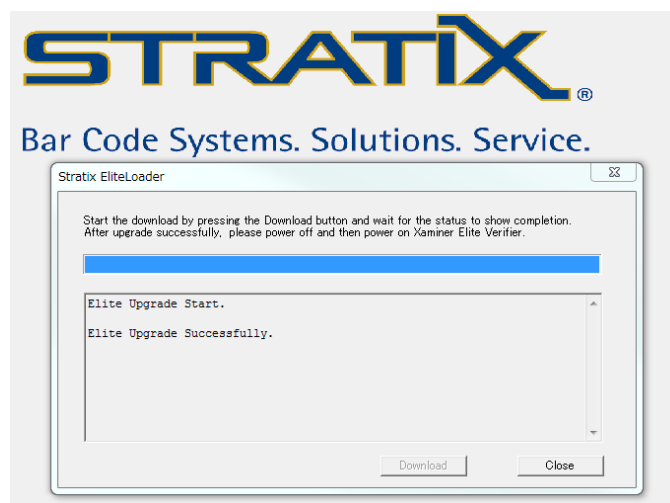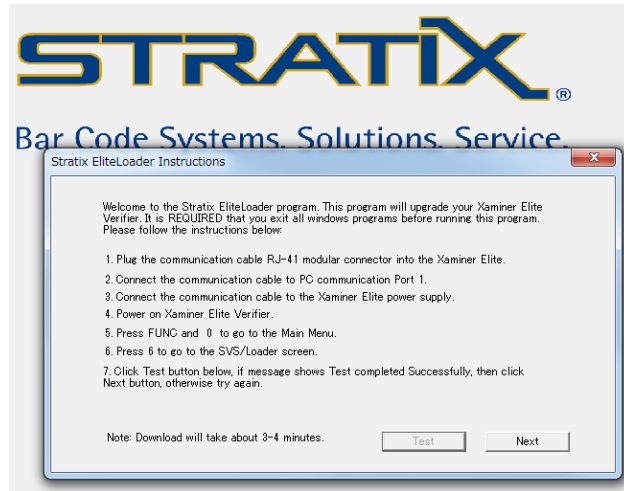

エグザマイナー本体へのダウンロード完了。

【注】タイマーOFF 設定を Enable に戻してください。